



Cat Camp

Instructions

1

Open up your tent, connect the numbered pole segments as follows:

- a) Two long poles using 3,1,1,1,3
- b) One short pole using 2,2,2

Thread the two long poles through the loops in the tent fabric.

2

One of the ends of a number 3 pole segment will fit into the pin on the corner of the tent. You may need to try both ends.

3

Take the weather shield and insert the small pole (2,2,2) across the centre into the fabric slots.

Place the weather shield over the tent with the pole pointing towards the front and back of the tent.

5

Straighten out the tent fabric and tie back the front door.

Your tent is now ready for cat camping!

4

Hook the weather shield into the pin rings on each corner using the plastic hook.





WARNING: PLEASE BE SENSIBLE

- Cat Tents are made for indoor use only and are not intended to be used without parental supervision
- For step by step instructions on how to set-up the Cat Tent, please visit www.catcamp.co
- The makers of the Cat Tent, Cat Camp, accept no responsibility for misuse or any accidents that arise from using a Cat Tent
- Do not expose Cat Tent for an extended time near heater or open flame and do not store tent in extreme temperatures. The cat tent has not been tested to comply with CPAI-84 fire retardant standards.
- The zipped door is decorative and should be kept open at all times during use
- To avoid mildew, do not store tent in wet or humid conditions as this will destroy nylon tents. Always make sure your Cat Tent is 100% dry before repacking and read instruction for proper care, cleaning and maintenance

DISCLAIMER AND WAIVER OF LIABILITY

In no event shall the owners of Cat Camp be liable for any direct, indirect, punitive, incidental, special, or consequential damages whatsoever arising out of, or connected with the use or misuse of any cat tent purchased herein.

By purchasing a Cat Tent, you agree and acknowledge that the product has been purchased at your own risk and you should assess the risks individual to your pet before purchasing any product or using any product with your pet.

You agree that in the event that Cat Camp is deemed liable for any harm caused, the amount which it shall be liable to you shall be limited to the cost of the product. In no event should you allow your pet to use this product unattended, nor should you leave any children unattended in the presence of this product as it may present a choking hazard.

WASHING

- For stains, spray area with water and lightly wipe off with one or two strokes.
- Do not rub the fabric or use detergents on the fabric
- If necessary, polyester tents floors or tarpaulins can be cleaned using a mild detergent
- Always make sure your tent is 100% dry before repackaging
- Never roll up or pack away a damp tent. Mildew will form within a few days and even the slightest amount of dampness will cause mildew to form.
- Synthetic fabrics such as nylon and polyester are not susceptible to rotting due to mildew; however the fabric will be stained and may acquire an unpleasant odour.
- Most synthetic fabrics are susceptible to damage caused by ultraviolet light. Depending on the degree of exposure to UV light, these fabrics can receive cumulative damage that will weaken and fade the material. To prolong the life of your tent and reduce the chance of damage caused by UV light, never set a tent up in direct sunlight for extended periods of time.

LIMITED WARRANTY

Cat Camp takes pride in its workmanship and undertakes to manufacture the best possible products. Cat Camp products are warranted to the original owner to be free from defects in material and workmanship for the life of the product. Cat Camp tents are warranted to the original owner to be free from defects in material and workmanship for 3 months from the original purchase date. If any such defect arises and a valid claim is received by Cat Camp within the applicable warranty period, Cat Camp will, at its option, repair or replace the products without charge, other than shipping costs as set forth below. This warranty supersedes any other warranty and is subject to the following conditions and limitations.

Since no Cat Camp product is indestructible, this warranty does not cover defects attributable to or resulting from abuse, alteration or normal wear and tear i.e. exhausted zippers or natural hazard damage due to weather, animals, and/or ultraviolet {UV} damage. To make a claim under this warranty, if deemed appropriate for repair, please contact our customer service department at support@catcamp.co which will give you, the original purchaser, a return authorization number and instructions on how to proceed. All products being considered under this warranty must be accompanied by proof of purchase.

We do not take responsibility for items not received or tracked to our locations. Please be sure to insure any shipment, as Cat Camp cannot be responsible for uninsured packages. Shipping and insurance charges to send products to the Warranty Department are the customer's responsibility. Cat Camp will absorb the regular return shipping charges. However, if you request that we return your product via expedited shipping service, the additional shipping charges will be billed to you. This warranty is not transferable and gives you, the original purchaser, specific legal rights.