



Sound System™
Just Plug®

Micro Speakers Instructions

JS6965

Micro Speakers JS6965

CONTENTS: 2 Speakers with 6' (1,82 m) Cable, Double Stick Foam Tape

Micro Speakers are tiny and have good volume for its size. They are easy to hide in any layout, presentation board or diorama.

INSTRUCTIONS

1. Insert the plug from a speaker into the speaker port of a Sound Hub™ (JS6904).

2. Attach the speaker with the foam tape.

TIP: To hide the speakers, use our Grill Cloth Kit (JS6964).

INSTRUCTIONS / INSTRUCCIONES / ANWEISUNGEN

1. Insérez la fiche d'un haut-parleur dans le port haut-parleur d'un Sound Hub™ (JS6904).

2. Fixez le haut-parleur à l'aide du ruban adhésif en mousse.

CONSEIL : pour dissimuler les haut-parleurs, utilisez notre Grill Cloth Kit (JS6964).

1. Inserte el enchufe de un altavoz en el puerto para altavoces de un Sound Hub™ (JS6904).


2. Fije el altavoz con la cinta de espuma.

CONSEJO: Para ocultar los altavoces, utilice nuestro Grill Cloth Kit (JS6964).

1. Stecken Sie den Stecker eines Lautsprechers in den Lautsprecheranschluss eines Sound Hub™ (JS6904).


2. Befestigen Sie den Lautsprecher mit dem Schaumstoffkleband.

TIPP: Um die Lautsprecher zu verbergen, verwenden Sie unser Grill Cloth Kit (JS6964).

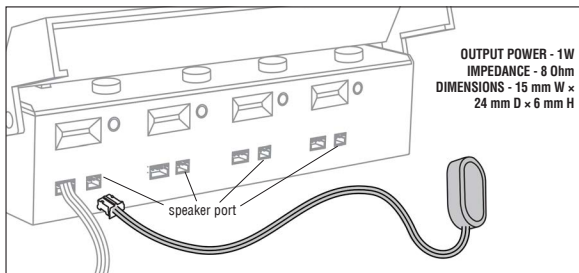

WOODLAND SCENICS®
Manufactured by **WOODLAND®**
PO BOX 98, LINN CREEK, MO 65052
woodlandscenics.com

Distributed by Bachmann Europe.
13 Moat Way, Barwell, Leicestershire, LE9 8EY. ENGLAND.
Am Umspannwerk 5, 90518 Altdorf b. Nürnberg. GERMANY.

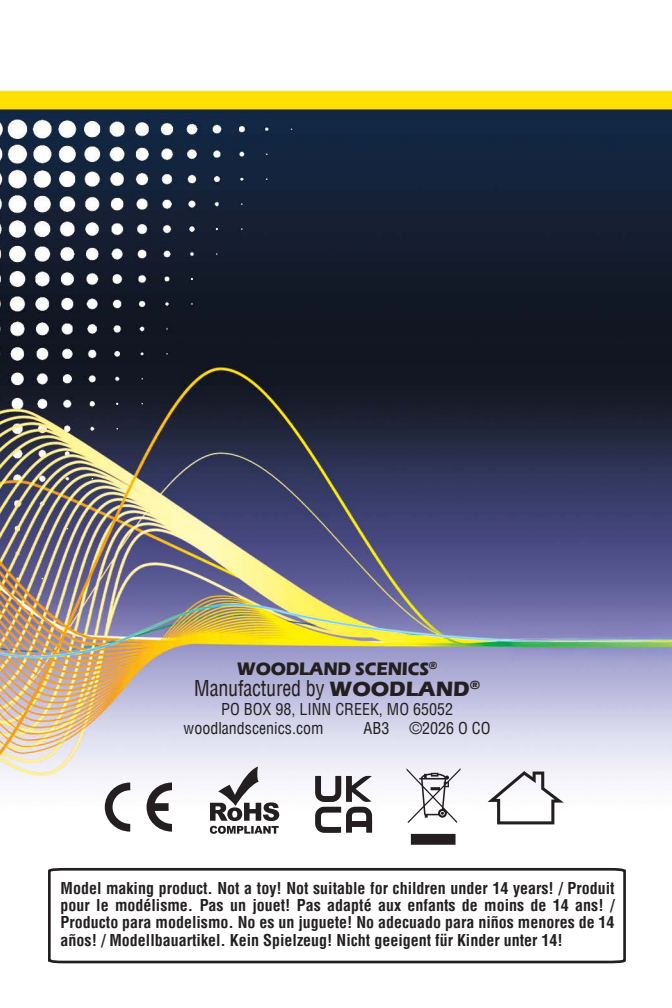

WOODLAND SCENICS®
Manufactured by **WOODLAND®**
PO BOX 98, LINN CREEK, MO 65052
woodlandscenics.com AB3 ©2026 O CO



Model making product. Not a toy! Not suitable for children under 14 years! / Produit pour le modélisme. Pas un jouet! Pas adapté aux enfants de moins de 14 ans! / Producto para modelismo. No es un juguete! No adecuado para niños menores de 14 años! / Modellbauartikel. Kein Spielzeug! Nicht geeignet für Kinder unter 14!