


5mm Diffused LED Kit

STEP 1

From each LED wire, twist the stripped ends of the **red** wires together, then twist the stripped ends of the **black** wires together. One twisted together, trim these wires down to about 1/4".

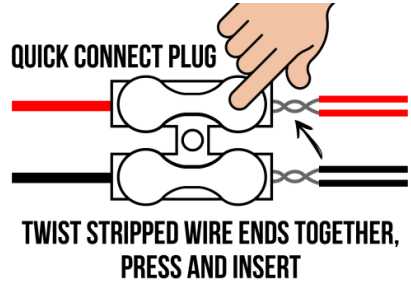

STEP 2

Insert these twisted red and black wires into the Quick Connect plug, **opposite** the red and black wires that come pre-connected to the Quick Connect plug. Simply press, insert and release as illustrated above.

STEP 3

With the controller **power off**, insert the Quick Connect plug in to the A016 Power Terminal or the new Ztrains ZTR-251 Accessory Power Distribution Box. **Turn on the power and you're all set!**

The included alcohol pads are for wiping down surfaces prior to attaching the adhesive backed wire clips. A #4 screw is also included to attach the Quick Connect Plug to your layout.

